



Armor-X® by dinoflex

Cleaning and Maintenance Interlocking Rubber Flooring



RECYCLED
RUBBER
FLOORING



Guidelines for Interlocking Rubber Flooring

Note: Sealants, waxes, and similar treatments may alter the surface characteristics and appearance. Oil-based cleaners should also be avoided. Dinoflex does not assume responsibility for any damage resulting from the use of chemical additives or any of the products noted above.

During all floor cleanings, avoid using excessive amounts of cleaner, as this can create a slippery surface. Always display 'Slippery When Wet' signs, and ensure the area is fully dry before allowing any foot traffic.

Post Installation Cleaning

- When installation is complete, sweep floor to remove any debris then vacuum thoroughly to remove all surface dust and dirt.
- Damp mop using DinoClean or a neutral pH cleaner diluted with warm water using a micro-fiber mop. (See dilution rates on label).
 - › Use a two-bucket system and change the water frequently.
- If floor has been unprotected during construction and an excessive amount of dirt or dust is present, additional cleaning with an auto scrubber may be required.
 - › Low pressure brushes and low RPMs are recommended.
 - › If disc type equipment is used, be sure to use a soft nylon brush, not a pad.
- Do not flood floor and always allow to dry thoroughly before foot traffic is permitted.

General Maintenance

- Typically, Dinoflex Rubber Flooring requires less maintenance than other types of flooring. Preferred method of maintenance is sweep, then damp mop with a microfiber mop. Do not use a string mop. Use a two-bucket system with DinoClean or a neutral pH cleaner and change water frequently.
- Do not flood floor and always allow to dry thoroughly before foot traffic is permitted.

Periodical Deep Cleaning

- Periodical deep cleaning may be necessary. Use an auto scrubber or a low-RPM single-disc floor machine using DinoClean or a neutral pH cleaner diluted with warm water.
- When using a low-RPM single-disc machine, remove the slurry with a wet vacuum.
- Rinse thoroughly with clean water, replacing the rinse water frequently.
- Do not flood floor and always allow to dry thoroughly before foot traffic is permitted.

DINOCLEAN APPLICATIONS AND DILUTIONS

Solution for auto scrubbers:

- Regular soils = 1 part to 650 parts water.
- Heavy soils = 1 part to 80 parts water.

Solution for damp mopping floors:

- Regular soils = 1 part to 160 parts water.
- Heavy soils = 1 part to 80 parts water.

Use a mop bucket, mop pail, or auto scrubber to clean recycled rubber floors and all other hard surfaces not affected by water. Refer to product label for detailed dilution and cleaning instructions.



Dinoflex
P.O. Box 3309
5590 46 Ave SE
Salmon Arm, BC, Canada
V1E 4S1

Toll Free: 1-877-713-1899
Direct: 250-832-7780
sales@dinoflex.com
dinoflex.com



5-year limited warranty
when installed in accordance with
Dinoflex's Installation Guidelines.

Date Issued: January 2026