

Installation Guidelines

For



Indoor Flooring

Square Cut Glue Down



Reg#SCS-FS-02144

This product has been certified by SCS to meet the rigorous indoor air quality requirements of the FloorScore® certification program

The follow pages are guidelines, if not followed, warranty will be voided. Please read this manual thoroughly before installing Dinoflex DinoTurf Rubber Surfacing Products

Tel: (250) 832-7780

Fax: (250) 832-7788

Toll Free Tel: (877) 713-1899

TABLE OF CONTENTS

| <u>SECTION</u> | | <u>PAGE</u> |
|-----------------------|-------------------------------------|--------------------|
| I | GENERAL INFORMATION | 3 |
| PRODUCT | | |
| II | MATERIAL STORAGE & HANDLING | |
| | General Packaging Information | 3 |
| | Receipt of Merchandise | 3 |
| | Storage | 3 |
| III | TOOLS & ACCESSORIES | |
| | TOOLS AND SAFETY EQUIPMENT REQUIRED | 4 |
| | ADHESIVE | 4 |
| INSTALLATION | | |
| IV | SUB-SURFACE | |
| | Preparation of sub-surface | 4 |
| | Concrete | 4-5 |
| | Wood | 5 |
| | Hazards | 5 |
| V | PREINSTALLATION | |
| | General Information | 5-6 |
| | Chalk Lines | 6 |
| | Mat Layout | 6 |
| | Acclimation – Dry Lay Process | 7 |
| | Cutting | 7 |
| VI | INSTALLATION | |
| | General Installation Information | 7-8 |
| | Mat Installation | 8 |
| | Clean Up Adhesive | 8 |
| | Rolling | 8 |
| CLEANING | | |
| VII | POST INSTALLATION CLEANING | 9 |

SECTION I – GENERAL INFORMATION

- This installation method and mat format is a must for all areas in extreme temperature and humidity change, or where surface moisture may be present after installation, i.e. ice arenas, locker rooms and entry ways.
- Product Information:
 - Thickness tolerance of $\pm 0.5\text{mm}$
 - Dimensions: 38" x 38" = 10.02 ft² (96.5cm x 96.5cm) Dimension tolerance of 1/8" (3.2mm)

SECTION II – MATERIAL STORAGE & HANDLING

General Information:

- All Dinoflex products are packaged on wooden pallets, covered with a plastic cozy, and secured by metal strapping. (image below does not include metal strapping)



Receipt of Merchandise:

- It is recommended you double-check your order is correct.
- Inspect for any damage that may have occurred during transportation.
- Identify any other possible shortcomings.
- For your own protection, ensure that defective product is identified prior to the start of the installation.
 - Notify your sales rep regarding any defective product immediately.
- Dinoflex is not responsible for any installation costs that occur because of defective product being installed.
- If adhesives were exposed to freezing temperatures, place indoors and bring to room temperature between 14°C (57°F) and 23°C (72°F) before using.
- Read technical data sheet and SDS for adhesive.

Storage:

- Store product in a dry and clean area.
- Before placing any Dinoflex product in storage remove the pallet strapping.
- Leave plastic cozy on during storage.
- Adhesive must be stored above 18°C (65°F) in a dry heated space.

SECTION III – TOOLS & ACCESSORIES

Tools and Safety Equipment:

- A two-person installation is required for large areas (one to handle materials and one to handle adhesive).
- Safety glasses
- Rubber gloves and boots
- Heavy duty utility knife
- Measuring tape
- Transit level and straight edge
- Chalk snap-line
- 1/16" x 1/16" x 1/16" V- Notch Trowel
- Carpenter's square
- Putty knife
- Masonite board or plywood
- 858ml adhesive caulking gun, if needed to adhere reducer strip
- 100lb roller depending on thickness
- **Brush with synthetic bristles**

Adhesive:

- Varying temperature ranges will affect curing times, viscosity and pot life of adhesive, possibly resulting in adhesion problems.
- Use safety glasses, rubber boots, and rubber gloves when applying adhesive. Do not allow adhesive to cure on your hands
- Room must be well ventilated.
- For first aid and safety instructions see labels on can and the safety data sheet.
- If adhesives other than the products listed below are being used, this could void the warranty. Contact Dinoflex for verification.
- For detailed information and product use, refer to Technical Product Data Sheet, included and adhesive.

DinoGrip Adhesive (V.O.C. compliant)

- Single component polyurethane adhesive
- 4 US gallons: 57lbs (25.8kg)
- Approximate coverage: 400ft² (37.16m²)
- 1/16" V-notched trowel supplied

Chemrex Urethane 948 (V.O.C. compliant)

- Single component polyurethane adhesive
- 858 ml gun grade: (29 oz tube)
- Approximate coverage:
 - 1/8" (3mm) bead = 345 lineal feet
 - 3/16" (5mm) bead = 153 lineal feet
 - 1/4" (6mm) bead = 86 lineal feet
 - 5/16" (8mm) bead = 55 lineal feet
 - 3/8" (10mm) bead = 40 lineal feet
- 12-month shelf life

SECTION IV –SUB-SURFACE

Preparation of the Sub-surface:

- The sub-surface must be flat/smooth, clean and dry, structurally sound and all debris including old adhesive must be removed.
 - Scraping may be required to remove debris.
- Expansion joints in the concrete are designed to allow for expansion and contraction of the concrete. If a floor covering is installed over an expansion joint, it will likely fail in that area. Use expansion joint covers designed for resilient flooring.
- Particleboard, chipboard, Masonite and Lauan Plywood are not considered suitable underlayment.
- If installing on an incline surface, start at the bottom and move up the surface to avoid sliding of the mats.
- Debris left under mats will cause height variations and undulations.
- If the sub-surface has been previously sealed or finished the surface may need to be stripped and cleaned to ensure an adequate bond.
- Petroleum distillates (e.g. solvents) as well as liquid animal fats may cause the surface bonding to fail. Test results for other harmful chemicals and compounds may be available on request.
- Contact Dinoflex for verification.

Concrete Sub-Surface:

- New concrete sub-floors must be thoroughly cured and free from hydrostatic pressure (a minimum of 30 days after pour).
- Consult adhesive specifications for allowable moisture tolerance.
- Concrete substrates should not exceed 90% RH and/or 5lbs x 24-hours x 1000 sq. ft.
- It is essential that pH tests be taken on all concrete floors. This must range between 7 and 9. If it does not, the sub-floor must be neutralized prior to the beginning of the installation.
These tests must be documented.
- Moisture vapor emissions test in accordance to ASTM F1869 and relative humidity in concrete test in accordance to ASTM F2170 must be completed.
- Sub-surface must be smooth and level to a tolerance not exceeding 1/8" in 10 lineal feet.
 - The Concrete Surface Profile (CSP) must achieve a requirement of CSP2.
- If existing concrete is too rough, or does not meet the above criteria, apply a Portland cement based leveling compound to smooth and level the surface. Follow all leveling compound manufacturer's instructions.
- Moisture is the single most significant factor that causes bonding failure to the sub-surface.
- Warranty is not applicable if specified moisture ranges are not adhered to.

Wood Sub-Surface:

- Wood sub-surface must be a minimum of 1" thickness, and free from any flex movement. (5/8" on joists with a 3/8" overlay is acceptable).
- New plywood should be acclimatized for a 48-hour period prior to installation of the rubber flooring.
- CDX exterior smooth one side is suggested for new wood substrates.
- Secure all nails and screws to prevent future protrusion.
- Any cracks, holes, rough or uneven areas should be patched with a polymer-modified cement leveling compound and/or sanded to achieve a smooth surface.

- It is vital that a moisture test be completed prior to installation with records kept. No less than 20 spot checks per 1000 sq. ft. should be observed. Any readings higher than 13% are not acceptable and installation must wait until levels are at or under 13%.
- Moisture is the single most significant factor that causes bonding failure to the sub-surface.
- Warranty is not applicable if specified moisture ranges are not adhered to

Hazards:

- **Silica Warning:** Concrete, floor patching compounds, toppings, and leveling compounds can contain free crystalline silica. Cutting, sawing, grinding, or drilling can produce respirable crystalline silica (particles 1- 10 micrometers). Classified by OSHA as an IA carcinogen, respirable silica is known to cause silicosis and other respiratory diseases. Avoid actions that may cause dust to become airborne. Use local or general ventilation or provide protective equipment to reduce exposure to below the applicable exposure limits.
- **Asbestos Warning:** Resilient flooring, backing, lining felt, paint, or asphaltic “cutback” adhesives can contain asbestos fibers. Avoid actions that cause dust to become airborne. Do not sand, dry sweep, dry scrape, drill, saw, bead blast, or mechanically chip or pulverize. Regulations may require that the material be tested to determine the asbestos content. Consult the document “Recommended Work Practices for Removal of Existing Resilient Floor Coverings” available from the Resilient Floor Covering Institute.
- **Lead Warning:** Certain paints can contain lead. Exposure to excessive amounts of lead dust presents a health hazard. Refer to applicable federal, state, and local laws and the publication “Lead Based Paint: Guidelines for Hazard Identification and Abatement in Public and Indian Housing” available from the United States Department of Housing and Urban Development.

SECTION V – PRE-INSTALLATION


General Information:

- Prior to installing Dinoflex DinoTurf Flooring, ensure all other trades have completed their work schedules.
- The use of Masonite board or plywood should be used to protect the rubber flooring from damage and debris.
- Product, sub-floor and adhesive must be of the same temperature. This should be checked using an infrared digital thermometer.
- Dinoflex is not responsible for any product failure if proper floor preparation and/or installation procedures are not followed.
- Check ambient temperature:
- All HVAC systems must be fully operational 24-hours prior to beginning the acclimation process.
- Rubber flooring may be installed between temperatures of 14°C (57°F) and 23°C (72°F).
 - Room temperature must be consistent during the entire installation.
 - Large fluctuations in temperature or humidity will cause expansion or contraction.
- In-floor radiant heat should be shut off for 24-hours prior to acclimation (72-hours prior to installation), be shut off throughout installation and remain off for 72-hours after installation is complete.
 - It is recommended that surface temperature does not exceed 25°C (77°F)

Chalk Lines:

- Locate the midpoint of the room, chalk a start line down the center. Chalk another similar start line 90° to the first one. (Figure 1)

Figure 1

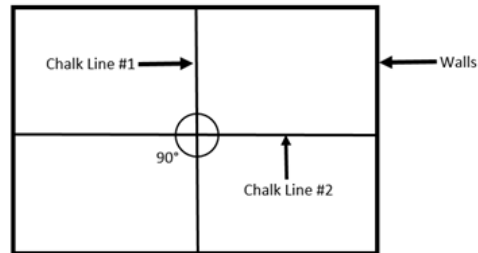

Mat Layout:

- This product is directional therefore each mat is marked with a “this side down sticker”
 - Make sure that all mats are laid down with the sticker in the same direction.
 - Do not remove these until final glue down has commenced.
 - The installer should have all relevant information about the mat arrangement from the owner.
- Begin mat layout from the point where the two chalk lines intersect.
- Work outwards in both directions.
- Start second row on either side of the center line towards the chalk line.
- Make sure that second row is installed by staggering mats.
 - This will avoid any four corners from meeting at one spot. (see figure 2)


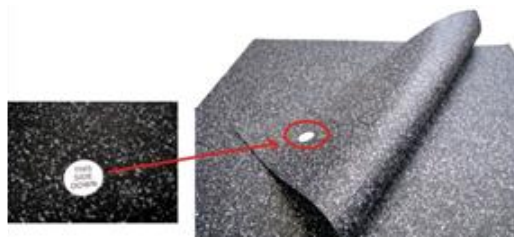


Figure 2

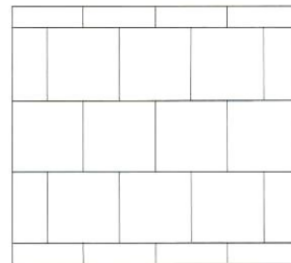

Acclimation and Dry Lay:

- **Acclimation/Dry Lay Checklist is required to be completed or warranty will be void.**
- A minimum of 48 – 72 hours before starting the installation.
 - Storage longer than 2 weeks will require a longer acclimation period.
 - Mats in the lower portion of the stack will compress to a greater degree than those in the upper portion.
 - A mat laid down in the morning hours at 0°C (32°F) would be a different size than a mat laid at 20°C (68°F) later in the day.
 - Acclimation should only begin once the sub-surface has reached a temperature between 14°C (57°F) and 23°C (72°F).
- Lay out all mats on the sub-surface in piles of 2 or less:
 - Allow them to acclimate until they have reached a consistent size.
 - Some products under certain conditions have shown expansion and contraction in size of up to 1/8” (3.2mm).

- Check for any shading.
 - Although this product is directional and has a sticker indicating the direction, rotating the mat 90° or installing it in a less visible area may help improve the effect.
- Inspect all mats for visible defects.
 - Ensure the defective product is identified prior to the start of the installation, notify Rep/Dealer immediately.
 - Labor will not be covered if any defective product is installed.

Cutting:

- Lay mat on a flat surface, hold the metal straight edge on the cut line, and cut with sharp utility knife.
- Keep scoring the cut until separated.
- Change or snap off blades frequently to ensure clean cuts.
- For odd angles, circular patterns, etc. a cardboard template is suggested.
- Join factory edges together. Hand cut edges should be used against the perimeter walls only.

VI – INSTALLATION

General Installation Information:

- **Do not install** the mats if they are not square and the appropriate thickness has not been reached.
- Intended for indoor use only and should not be installed in areas where the temperature is inconsistent.
- Glue down installation is required for all square edge mats.
- Refer to adhesive label for working time.
- Ensure to work in small areas, 2-3 mats at a time so the adhesive does not set or skin over before laying the mat.
- Avoid uneven spreading or the use of a larger trowel. Excess adhesive can result in adhesive coming up between the seams.
- Remove excess adhesive from the sub-floor within 10 minutes with a putty knife so it does not cure. Cured adhesive on an adjacent row will cause height variations.

Mat Installation:

- Take the mat you are installing, place it less than an inch away from the mats already glued down and slide towards them being sure not to push excess adhesive between the seams.
 - This will keep excess adhesive from protruding between the seams.
- Leave ¼" gap to all walls for mat expansion.
- Allow 72-hours setting time before post install cleaning.
- Avoid heavy traffic or rolling loads during curing to prevent indentation or movement of mats.
- Never leave adhesive ridges or puddles. They will telegraph through the material.

Clean Up Adhesive:

- Do not get adhesive on the top surface of the DinoTurf flooring as it is impossible to remove when cured.
 - Immediately use a clean damp cloth to remove any adhesive.
- Dinoflex does not warranty product where the attempt to remove adhesive has been made. Any damage to the mat because of adhesive removal is solely that responsibility of the installer.

- Contact your Dinoflex supplier immediately for suggested cleaning methods if this happens.

Rolling:

- Roll each row as completed or within 15 - 20 minutes. Also roll the entire area at the end of each day
- Work in all directions. North to South and East to West.
 - Do not twist or pivot the roller or your feet as it will stretch the mats, roll in a long straight line.
 - Adhesive is slippery when first spread and mats can shift position even if only slightly.
 - Too much rolling or too heavy of a roller could cause the mats to buckle and adhesive to move upwards through the seams.
 - Furthermore, stretching of the rubber flooring can eventually lead to gaps between the mats.
 - Roll slowly, rolling too quickly could affect the bond of the adhesive.
 - Do not roll right along edge of mat, always try to overlap on the seams.
- No foot traffic of any kind should be allowed for the 48-hours, allow 72-hours for maximum strength.
- When rolling a logo, place a piece of Masonite board or plywood ovetop to stop small pieces from moving.

Roller Guideline:

22mm-26mm floor – use a 100lb roller.

VII – CLEANING

Post Installation Cleaning:

- When installation is complete, and adhesive is fully cured (at least 72-hours).
- Vacuum or rotary sweep floor to remove any debris.
- Do not use any oil base cleaners as they will deteriorate the mats.
- Cross brush once installation is complete.
 - Use a brush with synthetic bristles, do not use a brush with metal or wire bristles
 - All brushing activity should against the grain

Dinoflex Recycled Rubber Innovators
P.O. Box 3309
5590 – 46th Ave S.E.
Salmon Arm, B.C. V1E 4S1 Canada

www.dinoflex.com

Tel: (250) 832-7780
Fax: (250) 832-7788
Toll Free: 1-877-713-1899
E-mail: sales@dinoflex.com